

STEP SLIDERS

20+ JT GLADIATOR

SRGL-08



TOOLS REQUIRED

- 10, 13mm Socket

SKILL LEVEL

- Novice/Intermediate
- 2 persons

Little skill level required, however, additional help is required for removal and installation of sliders.

TIME REQUIRED

- 1.5 Hour

Time to install this should only take about an hour and a half.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

• Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

STEP 1 | If you have factory steps or sliders, they will need to be removed prior to install.

Use a 10mm socket to remove the factory nuts securing the slider to the body/pinch weld.

Then, while a friend supports the slider, remove the remaining factory hardware using a 13mm socket.

Remove the slider and set it off to the side. Repeat steps for opposite side of the vehicle.

Note: Assistance is recommended to prevent injury and damage to the product or vehicle.



INSTALLATION MANUAL


With assistance, install the steps on the vehicle and loosely secure all provided hardware.

The smaller M6 hardware will be used on the rear studs.

Note: Assistance is recommended to prevent injury and damage to the product or vehicle.



STEP 3 | Once all hardware is loosely installed, secure the hardware on the studs using a 10mm and 13mm socket.

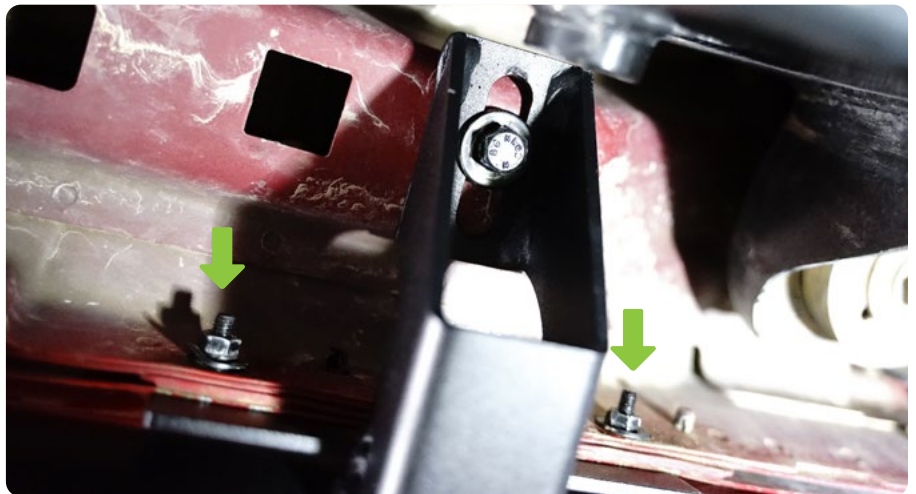

INSTALLATION MANUAL

STEP 4 | Finish securing the remaining hardware using a 13mm socket.

Repeat steps for the opposite side of the vehicle.

Double check fitment and all hardware is secure.



STEP 5 | Congrats! You are finished with the install of the 20+ JT Gladiator Step Sliders!

