

## REAR WINDOW MOLLE

24+ LAND CRUISER LC 250

MPT4-01



### TOOLS REQUIRED

- Trim pry tool
- 4mm Allen head
- 10mm socket

### SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful

### TIME REQUIRED

- 1.5 Hours

Time to install this should only take about an hour and a half

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



# INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

## HARDWARE INCLUDED

- (10) M6x15mm Allen head bolts
- (10) M6 Washers
- (2) Aluminum Spacers



**STEP 1** | For the install, these will show the passenger side install.

Lay out the items in the box and locate the passenger side panel and the upper mount as shown in the images.



**STEP 2** | Using the provided M6 hardware and #4 allen head, attach the bracket leaving it loose for adjustment.



# INSTALLATION MANUAL



**STEP 3** | Flip the panel over and using the M6 hardware and a #4 allen head, install the lower bracket as shown.

Ensure to also leave this loose for adjustment.



# INSTALLATION MANUAL

**STEP 4** | Use a trim clip tool to pry back the end caps on the rear grab handles.

Using a 10mm, remove both bolts on the handle and send off to the side. These will be reused..



**STEP 5** | Using the trim pry tool, remove the plastic caps on the panel under the window. Using a 10mm remove the bolt inside this cover.



## INSTALLATION MANUAL

**STEP 6** | Install the provided aluminum spacer into the hole using the stud side. Tighten down with your hand.




**STEP 7** | Hold up the molle panel and using the factory hardware AND handle, secure the upper mount to the factory holes using a 10mm socket.





**STEP 8** | Using the provided M6 hardware, secure the lower bracket to the aluminum spacers.

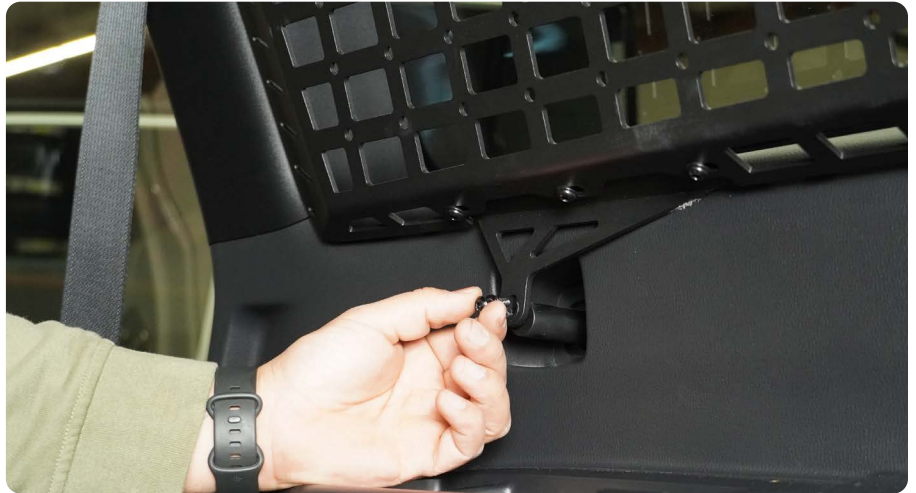

# INSTALLATION MANUAL

**STEP 9** | Once mounted, center the male so that it has equal spacing around the edge.

Avoid having the panel rest against the interior of the vehicle.

Using a #4 allen head, tighten the panel against the upper and lower brackets.



# INSTALLATION MANUAL

---

**STEP 10** | Double check all hardware is secure and then repeat steps 1-9 for the driver side.

Congratulations you are done installing the DV8 Land Cruiser Rear Window Molle Panels.

